



Note: Display mounting bracket may be adjusted or rotated depending on display's thickness.

ITEM NO.	DESCRIPTION	QTY.
1	Flex Synergy HMF: Speaker Assembly	1
2	Mounting Rail	2
3	Display Mounting Spacer (if applicable)	4
4	M8 or M6 Display Mounting Machine Screw	4
5	Display mounting bracket	2
6	1/4-20 x 3/4" Hex Head Machine Screw	4
7	1/4-20 x 7/16" Pan Head Machine Screw	4
8	1/4" Flat Washer	16
9	1/4-20 Nut	4

Follow display and mount manufacturer's recommendations. Verify mounting bolt sizing before mounting. Do not overload mount.



296 Pascal Street N.
St. Paul, MN 55104
Tel: (612) 379-0100
Fax: (612) 379-0101

817 Arnold Drive, #6-B
Martinez, CA 94553
Tel: (925) 372-8156
Fax: (925) 372-8157

Model	Flex Synergy HMF: Speaker Assembly	
DWG.	PLS-001444-05	Author ABlesbois
Date	7/24/2013	Revision 01+