



ITEM NO.	DESCRIPTION	Quantity
1	Display	1
2	Flex V2 Speaker	2
3	Flex Span Bar	2
4	Flex Mounting Arm	4
5	Flex Speaker Attach Plate	4
6	1/4"-20x.50" Carriage Bolt	8
7	1/4"-20 Kep Nut/Washer Combination	20
8	Display Mounting Bolt (By Others)	4
9	1/4"-20 Hex Head Bolt	4

Mounting Instructions

- If Display manufacturer allows, set Display face down on flat surface for best results.
 - Any Display Wall Mount (by Others) goes over Innovox Mounting hardware. Display mounting bolts go through Wall Mount, into Innovox hardware and then into the display.
1. Attach Span Bar (3) and Wall Mount (by Others) to display (1), using display attach bolts (8, Not Included).
 2. Attach Mounting Arms (4) to Span Bar (3) using 1/4" washers and nuts (7). One washer and nut per attach point, QTY 8. Finger tighten nuts only.
 3. Slide two Hex Head Bolts (9), into each track on back of speakers.
 4. Place Speaker Attach Plates (5) onto track on speakers (2) using the hex head bolts (9) and finger tighten kep nut/washer combination (7).
 5. Secure speaker attach plate/speaker assembly from step 4 to mounting arms (4) using a kep nut/washer combo (7) per attach point.
 6. Align speakers to match the display and tighten all nuts.

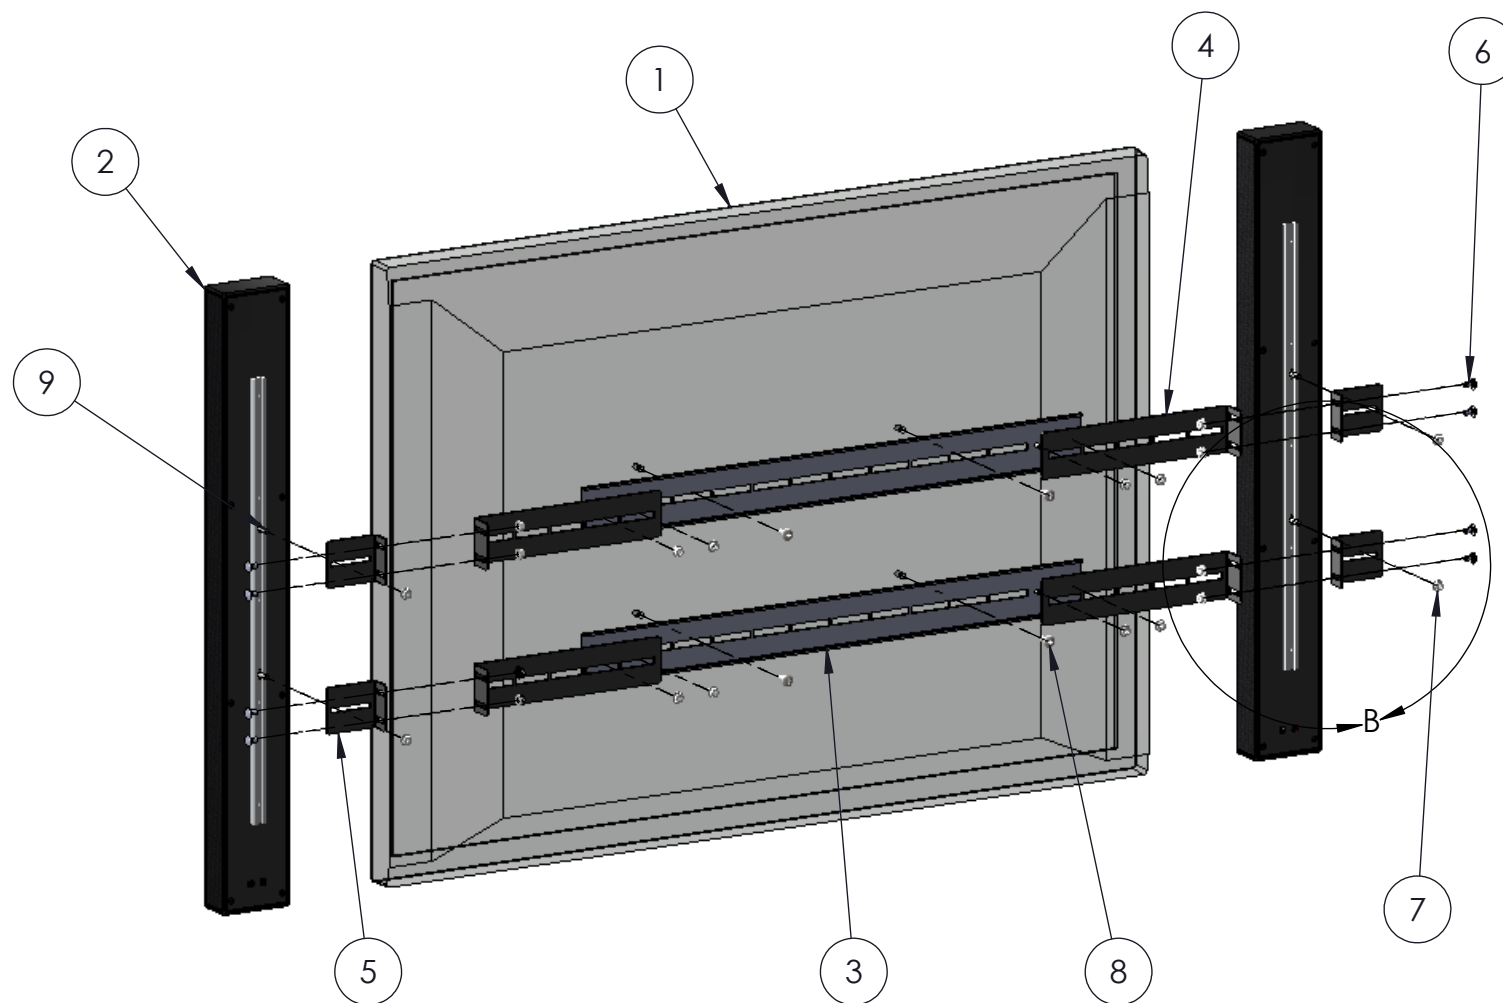

	296 Pascal Street N. St. Paul, MN 55104 Tel: (612) 379-0100 Fax: (612) 379-0101		Model Flex V2 Mounting Kit Instructions		
	817 Arnold Drive, #6-B Martinez, CA 94553 Tel: (925) 372-8156 Fax: (925) 372-8157	DWG. DSG-001422-05	Author DSirny		
		Date 3/14/2013	Revision 02		